 


Remote Control Features

1. Mutes audio and piano tracks. Displays Mu then track number.
2. To select Track # 1 - 9.
3. To select Track # 10 or 20, press +10 or +20, then 0.
4. Allows you to program a sequence of tracks to play. (See right column - Program.)
5. Return to beginning of track or to previous track.
6. Starts random play.
7. To quit random play, press STOP.
8. STOP.
9. Adjusts audio bass and treble. Press once, then use volume UP arrows.
10. See right column (Balance).
11. Increases piano volume.
12. See right column (F1).
13. Decreases piano volume.
14. Turns complete system ON/OFF.
15. To select Track # 21 through 29. (To select track 21, press this button [+20], then 1.)
16. To select Track # 11 through 19. (To select Track 15, press this button [+10], then 5.)
17. Repeat.
18. Move to beginning of next track.
19. PAUSE. Track number flashes until Pause or Play is pressed.
20. PLAY.
21. Transpose music. (Not Available.)
22. Tempo control for the speed of the song. (Not Available.)
23. Increases audio volume only.
24. Increases piano and audio volume.
25. Decreases audio volume.
26. Decreases piano and audio volume.

The Pianomation™ 2000CD will “remember” all the settings after you turn the system off. If the power cord is unplugged and plugged back again, the system will power up with the default values. The remote control unit uses two AA batteries.

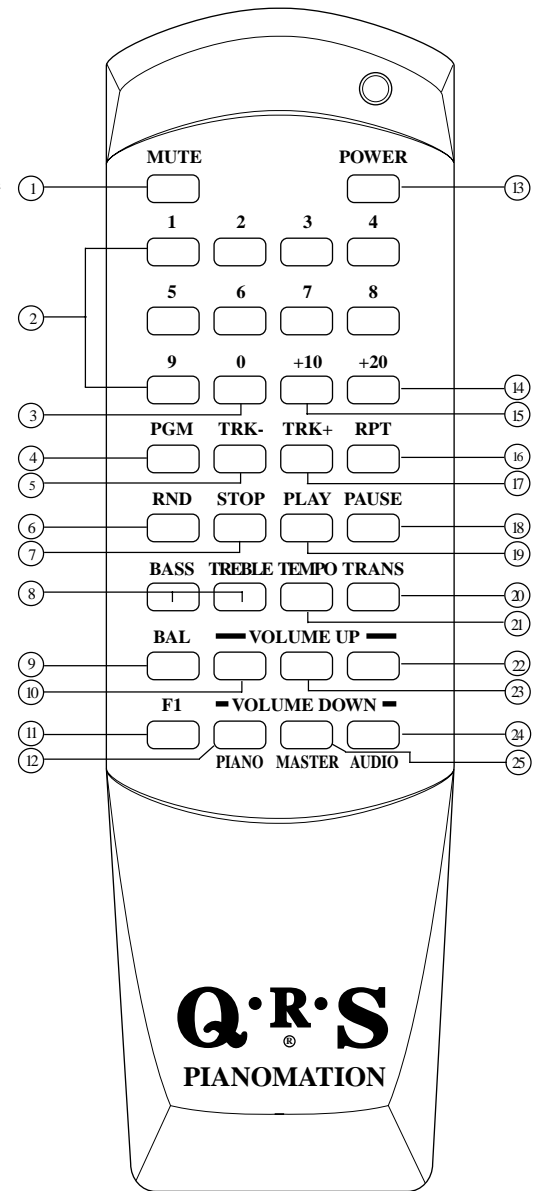

Balance

Pressed 1 time:

Balances between left and right for stereo audio CD (not Pianomation CD). Use with any up and down volume key for panning left/right.

Pressed 2 times:

Display reads d4 - Indicates no delay between audio & piano play.
 Note: For speakers that are far from piano, adjustment will be required. To adjust the synchronization of audio & piano play, use the track selection numbers: 0 to 3 decreases delay time; 5 to 9 increases delay time.

Press 3 times then press any UP arrow:

For recommended concert level playback.

Program

Display reads Pr. To set program, press desired track numbers, then Play. To escape Program mode, press Stop twice.

F1 Control

Pressed 1 time:

Recognizes the 2000CD player.
 Displays "Cd".

 
Pressed 2 times:

Recognizes an auxiliary CD changer.
 Displays "In".


Pressed 3 times:

Recognizes an auxiliary CD changer with a wireless receiver. Displays "rF".

THE REMOTE CONTROL

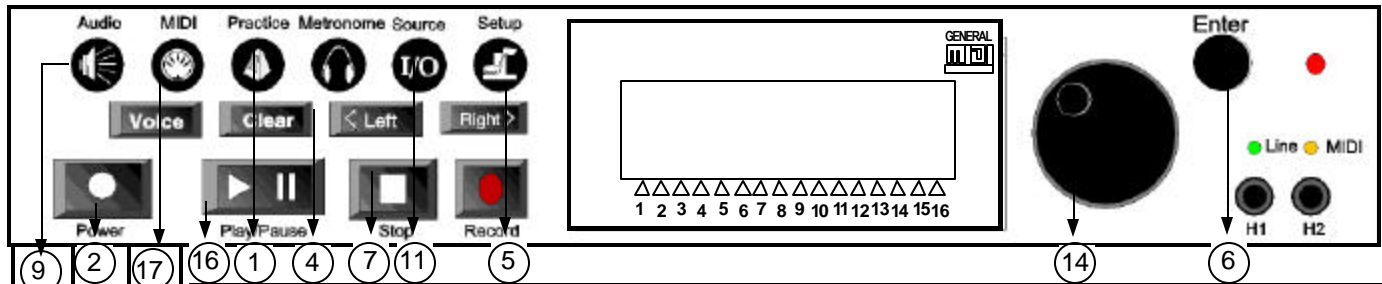

 The buttons on the remote control map to buttons on the face of the AMC unit, with the few exceptions noted below. Track - and Track + combined with the PGM button will allow navigation through menu items in place of the data dial. Note that if there are no options to choose then the Track - and Track + will rewind the track, or forward to the next track.

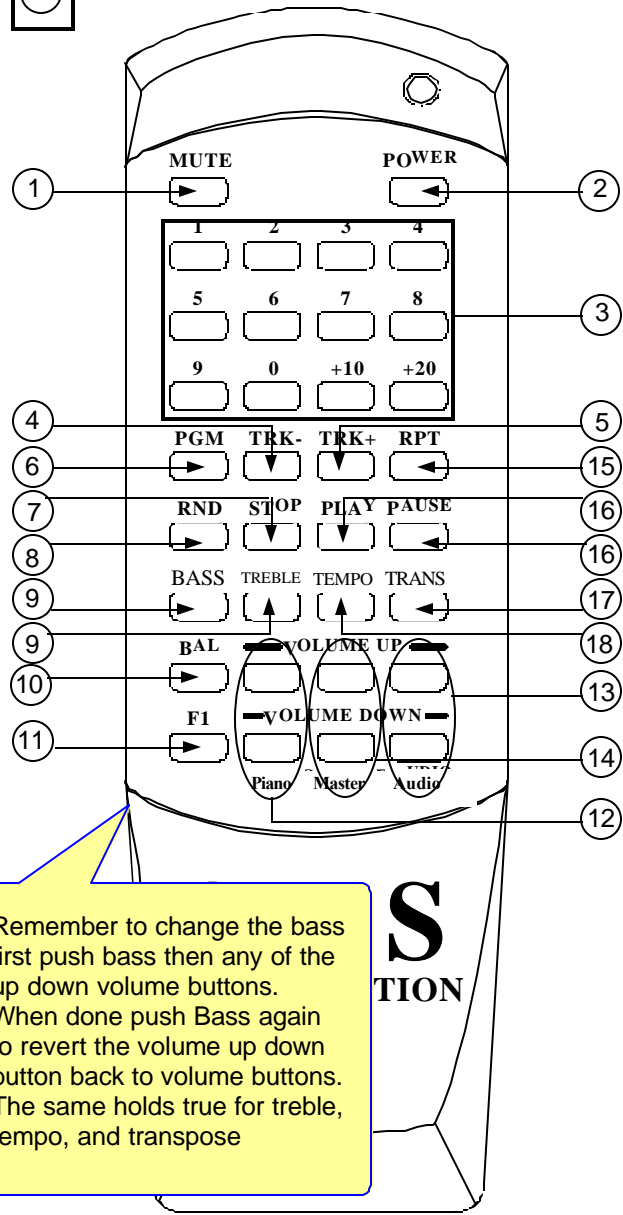

Remember to change the bass first push bass then any of the up down volume buttons. When done push Bass again to revert the volume up down button back to volume buttons. The same holds true for treble, tempo, and transpose

1. Mutes audio and piano tracks.
2. Turns complete system ON/OFF.
3. Presently not used.
4. Return to beginning of track or to previous track. Used to toggle through selections in the menu.
5. Advance to the next track.
6. Acts as the enter button.
7. STOP.
8. Sets random playback. To quit random playback, push stop then random.
9. Adjusts audio bass and treble. Press once, then use volume UP arrows. Press again to have volume levels reactivated.
10. Adjusts Balance. Press once, then use volume UP arrows. Press again to have volume levels reactivated. Pressing balance two times in a row will bring all levels to full dynamic range. Pressing three times brings it back to the stored flash values at startup.
11. Toggles through the sources.
12. Increases and decreases actual (unmixed) piano volume. Is deactivated in Advanced Audio Mode (ref: Setup).
13. Increases or decreases unmixed background volume. Is deactivated in Advanced Audio Mode (ref: Setup).
14. Increases or decreases the unmixed, mixed, headphones. The unmixed piano and background will increment up or down. The Mixed and Headphones will reference output values set under the setup menu.
15. Repeat sets system to repeat CD or Floppy when finished. Pressing again takes repeat off.
16. Play and Pause are the same buttons as they are on the AMC unit.
17. Press transpose and the transpose screen will display the screen. Adjust the key by pressing the volume up or down button. To return the volume to default back to volume, press the transpose button again.
18. Press tempo and the tempo screen displays on the screen. Adjust the tempo by pressing the volume up or down button. To the volume button to default back to volume, push the tempo button again. Tempo controls the speed of the song.