


Service & Installation

Setup ASUS Access Point Mode / PMII in Stand-Alone Mode

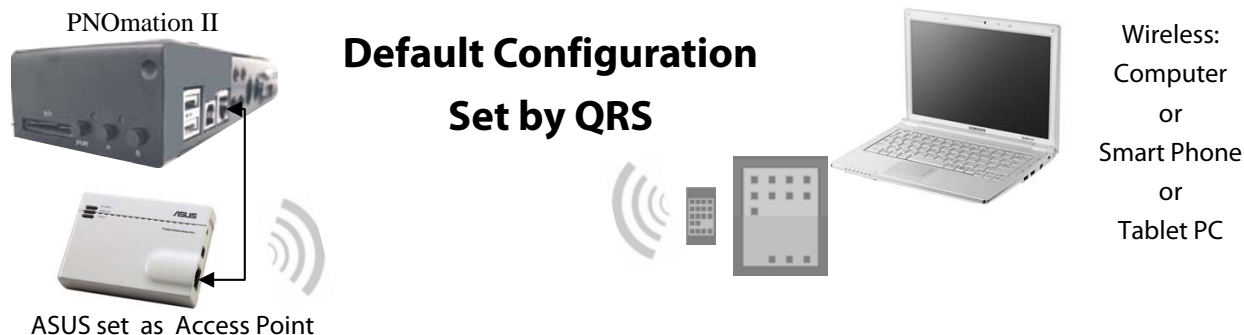

The Wired Connection Settings "Mode" in PNOmatation II MUST be changed before changing your Ethernet connection to PNOmatation II
Settings/Network Settings/Hostname/Wired Connection Settings/Mode [Network or Stand-Alone]
PNOmatation II in Stand-Alone Mode = Access Point with No Internet Access
IP Address 192.168.1.1 is assigned by PMII

Returning the ASUS WL-330gE Portable Wireless 4-in-1 Router to Access Point Mode

Disconnect the ASUS from the piano and use the extra USB power cable to connect to your computer.

Connect one end of an Ethernet cable into the ASUS Wireless

Connect the other end of the Ethernet cable into your computer

Connect the ASUS WL-330gE / Portable Wireless 4-in-1 Router to a power source

Confirm that the "power" LED is ON

Press and hold the "reset" button until the "power" LED begins to flash then release the button.

Wait until the "power" button stops flashing. ["Reset" is the small recessed button next to the power jack]

Enter 192.168.1.220 in the address window of your computer's web browser

If unsuccessful disconnect and then reconnect power to ASUS

The "Authentication Required" dialog box should appear.

Enter admin in the User Name field and admin in the Password field.

Click the OK button.




The ASUS programming window opens.

Click on the AP tab.

Enter the SSID name that you want to see when you connect to the AP from your wireless device. Our example uses ASUSQRS AP

Click the FINISHED button.

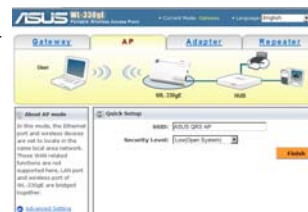


Click OK



The ASUS will save and restart with the new settings

 Close the browser window when this blue box closes.




Disconnect the Ethernet cable from your computer and plug it into the PNOmatation II Ethernet port.

Disconnect the ASUS from power and then reconnect.

You can now wirelessly connect to PNOmatation II via the ASUS wireless access point..

Enter QRSPNO [192.168.1.1/qrs] in your Internet web browser.

Click on Advanced Settings

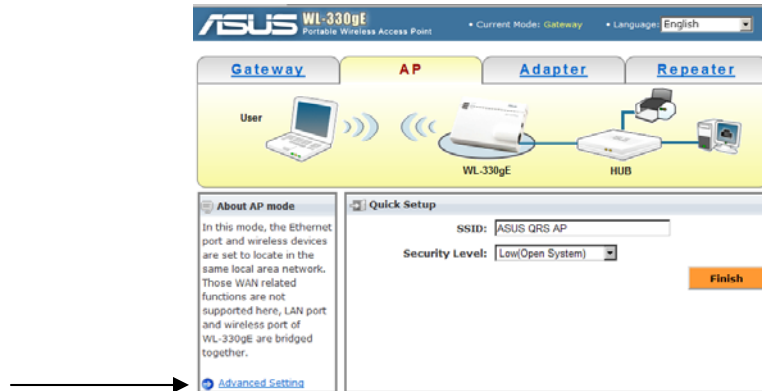

A new page will open.

Click on "Wireless" in the left column

The Channel is set to Auto.

Click on the drop-down box and select 11.

Go to the bottom of the page and click "Finish"

Click "Save & Restart"

When finished close the window by clicking on the "x" in the upper right corner